


BRIFIELD BR3 BODY CAMERA USER MANUAL

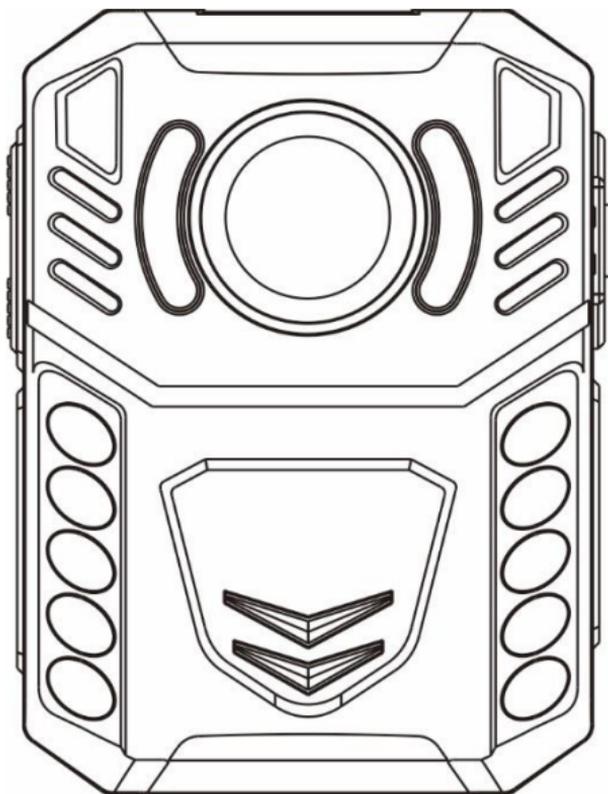

**Customer Service Email
info@brifield.co.uk**

CONTENTS

Page 1 - BR3 Diagram







Page 2 / 3 / 4 - BR3 Diagram
explanation

Page 5 - Screen functions / Menu
functions

Page 6 / 7 / 8 - Menu functions

Page 9 / 10 / 11 - Important
information

Page 12 - Product box contents /
Customer service

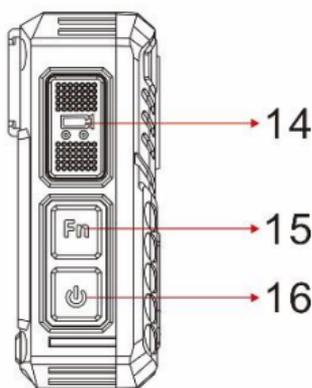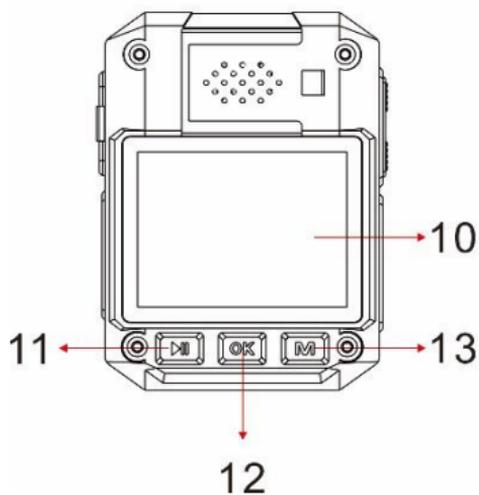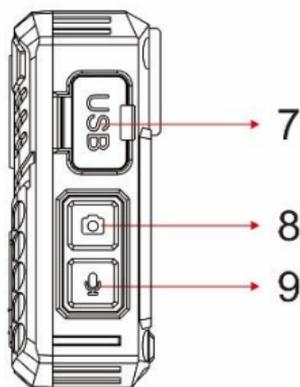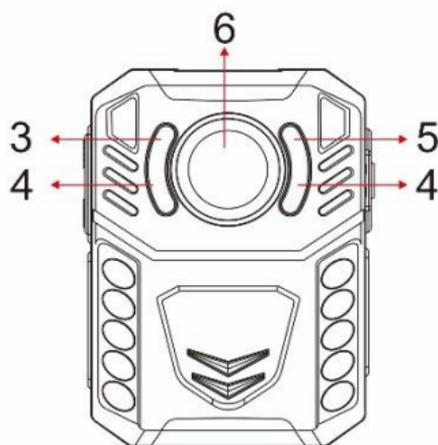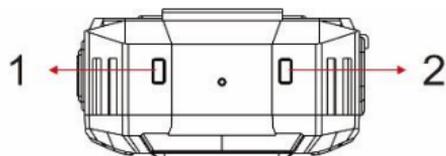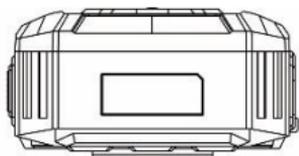

BR3 DIAGRAM EXPLANATION

- 1 - Right LED light:** **A.** Flat **GREEN** when idle. **B.** Flashing **RED** when recording a video. **C.** Temporary flat **RED** when a picture is taken in idle mode. **D.** Flashing **AMBER** light when recording an audio recording. **E.** Flat **GREEN** when the USB lead is connected to a computer.
- 2 - Left LED light:** **A.** Flat **WHITE** when device is fully charged. **B.** Flat **BLUE** when charging and when the USB lead is connected to a computer.
- 3 - Sensor:** Detects low and high light levels, this is what triggers the automatic IR night vision.
- 4 - Infrared night vision lights:** Gives a white vision that helps in very low light areas, or nighttime.
- 5 - White LED light:** Helps in low light areas.
- 6 - Lens:** Capture Video and images. The lens is also what triggers the motion detection.
- 7 - USB port:** Connect the BR3 USB cable to your computer, from there you can transfer your

recorded video, audio files and pictures to the computer. **Reset hole:** Next to the USB port. This is used to reset the device.

8 - Picture button: **A.** In idle mode, press to take a picture. **B.** While recording a video, press to take a picture.

9 - Audio record button: **A.** In idle mode, press to start an audio recording. **B.** When recording a video, press to mute/unmute the microphone. **C.** In idle mode and also while recording, hold for 2 seconds to switch between 720p and 1080p video resolutions.

10 - 2 Inch LCD screen.

11 - Left button: **A.** In idle mode, press to play the last recorded video, audio or picture. **B.** In playback mode, press to rewind the video. **C.** In menu mode, press to scroll up. **D.** In playback mode, hold to zoom out the picture.

12 - Middle button: **A.** In idle mode, press to access the playback mode. **B.** When recording a video or audio recording, press once to activate the **Important file button.** This will add a STAR icon on the video or audio file in playback mode. This

will also add a S letter at the end of the file name-
on your computer. This helps to easily identify the
more important video and audio files.

C. In playback mode, press to play and pause the
recording. **D.** In menu mode, press to select.

13 - Right button: **A.** In idle mode, press to enter
menu mode. **B.** In menu mode, press to scroll
down. **C.** In playback mode, press to fast forward
the video. **D.** In playback mode, hold to zoom in
the picture.

14 - Video record button: **A.** In idle mode, press
once to start a video recording. **B.** When the
device is switched off, hold for 3 seconds to power
on the device, and start a video recording
immediately.

15 - IR Light / White LED light button: **A.** In both
idle mode and while video recording, press to turn
on/off the IR night vision lights. **B.** In both idle
mode and while recording a video, hold for 2
seconds to turn on/off the white LED light.

16 - Power button: **A.** Hold for 3 seconds to
switch the device on/off. **B.** Press to go back or
exit. **C.** Press to turn the LCD screen on/off.

SCREEN FUNCTIONS



MENU FUNCTIONS

Use left button number 11 to go up. Right button number 13 to go down. Middle button number 12 to select. Button number 16 to go back.

- **Video Resolutions:** Change the video resolutions.

- **Picture Megapixel:** Change the Megapixel of the camera.

- **Burst:** These are different picture burst options. Let's say you select 5 bursts, now when you take a picture, 5 pictures will be taken one after the other.
- **Self timer:** This gives you a countdown, when the countdown reaches 0 then a picture will be taken.
- **Continuous shooting:** When on, pressing the picture button will activate continuous shots every 5 or 10 seconds depending on what you have selected in the menu. To stop the continuous shots, press the picture button once again.
- **Quality:** The quality of the video recordings.
- **Pre-record:** This feature will pre-record a short clip before you press the record button, it will then integrate itself into the main recording.
- **Delay record:** The amount of time the device waits until it stops the video recording.
- **Loop record:** When the memory card becomes full, the loop feature will automatically override the earliest recording then continue to record over the following recorded videos.
- **Split time:** This is how long you want the video clips to be.
- **Slide show:** This allows a slideshow within the internal picture playback mode. Changes picture every 5 seconds.
- **Infrared:** Manual Mode lets you turn the IR on and off yourself manually, and auto mode activates

the IR automatically when the view in front of the lens is dark and deactivates when the view is light.

- **Motion Detection:** Turn on/off. You will know the motion detection is activated because there will now be a face icon on the LCD screen. Once the motion detection is turned on from within the menu, press the record button. Now any motion in front of the lens will trigger the device to start a video recording. The device will continue to record, but when there is no longer any motion in front of the lens, there is a 10 second countdown. After the 10 seconds, the video will stop recording.

- **Record warning:** When turned on, the device voice says "Recording started." When deactivated, there is no voice.

- **Language:** Select your language.

- **Screen save:** The amount of time the screen will stay on until the LCD screen turns off.

- **LCD Brightness:** Option of Low / High.

- **Auto Power off:** The amount of time the device will remain idle before powering off.

- **LED light:** Option to turn the 2 LED lights at the top of the BR3 permanently off.

- **Key tone:** Turn the key tone on/off.

- **Volume:** Change the volume of camera speaker. This affects the loudness of video playback, audio playback, the key tone, record warning, and any other sounds played by camera. This does not

affect the volume of the recorded video or audio files themselves.

- **ID Setting:** Change the user ID. Use the left and right keys to change the letter or number and use the middle key to select and move onto the next character.
- **Change password:** Use the left and right buttons to change character and use the middle button to select and move onto the next character.
- **Time setup:** Adjust the time and date.
- **Default setting:** This will reset the internal settings back to the default settings.
- **Version of the device:** The version of the current device.

IMPORTANT INFORMATION

Memory Card (MAC users only): The only way to completely delete your recorded files and free up your memory from your BR3 body camera, is to empty your trash bin on your MAC. If you don't do this, then eventually the memory card will become full, and when it's full you won't be able to record any new footage.

The clips and attachment studs rotate 360 degrees: The crocodile clip, epaulette clip, chest harness and shoulder harness attachment studs, and the KlickFast stud ALL turn 360 degrees. Slot the stud or clip into the back of the BR3 then turn the clip or stud vertically. Or you can slot the clips and studs into the back of the body camera first, then attach the body camera to the chest or shoulder harness or KlickFast dock, then turn the body camera vertically. **To unlock the KlickFast:** to unlock the stud from the dock, turn the body camera 180 degrees, then pull up and out. Do the same thing to the stud if the body cam is not connected.

Transfer files to PC: Plug the USB lead into the computer. Enter the password. Find the drive file

on the computer. Once you are in the file, click onto the DCIM file. From there you can access all the recorded files. Drag the files from the DCIM files to your computer.

Change password: Access the change password within the menu, enter your old password (Left key to go up, and right key to go down, middle key to select and move on to the next one. The default password is 000000) Now enter the new password. Then enter your new password again to confirm it.

Change user ID: Select ID setting from the menu. Use left key to go up, use right key to go down, use middle key to select and move on to the next character.

Reset device: To reset the device, use a small needle to jab the reset button. The reset button is located next to the USB port.

Computer playback app: There are many different video playback apps online, some are free. You will need to download one to playback the video and audio files from this device. Or your computer might already have one pre-installed.

Delete files: You can only delete the recorded files from a computer. This is to stop people from getting rid of the evidence straight from the device itself. To

delete the files from your computer, right click, then delete them.

32GB Memory card: There is a 32GB memory card built into the device, however the internal settings take up some memory space. The actual amount of memory you will get after the internal settings is normally around 28.6GB to 29.8GB.

Product warranty: We offer a 12-month warranty on the Brifield BR3 body camera. This warranty covers faults that was caused by the manufacturer. If the fault was caused by the customer, then the warranty will be void.

BR3 USB Lead: Please only use the USB lead provided in the product box. Using other USB leads might cause damage to the BR3 body camera.

IP65 Water rating: Please note that the BR3 body camera is not fully waterproof. Do not submerge it into water. IP65 is the rating of the BR3 body camera, this is resistant to weather and dust. Rain will not damage the BR3.

PRODUCT BOX CONTENTS

- 1 X BR3 BODY CAMERA**
- 1 X USER MANUAL**
- 1 X USB LEAD**
- 1 X UK 3 PIN PLUG**
- 1 X EPAULETTE CLIP**
- 1 X CROCODILE CLIP**
- 1 X SHOULDER HARNESS**
- 1 X CHEST HARNESS**

CUSTOMER SERVICE

If you have any questions at all then please feel free to email us.

We guarantee a reply to your email within 12 hours.

We will do our absolute best to help you with all your questions and any technical problems.

Email address: info@brifield.co.uk

**BRIFIELD
BR3 BODY CAMERA
USER MANUAL**



**Customer Service Email
info@brifield.co.uk**